Foremost in Temperature Measurement™
NANMAC

US & Canada: 1.800.786.4669
International: 1.508.872.4811
www.Nanmac.com

# Load Data Operating Steps

RS232 Operation Process

Meter Down Load Process of Data Logger

ON

(show pc symbol)

OFF

(do not show pc symbol)

Press "RS232" button

ERROR

Push "START" button, PC & meter online.

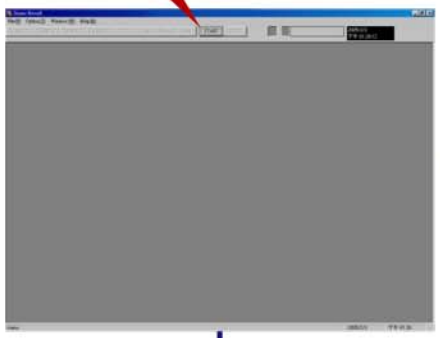

Press "YES" button confirm online

Click function keys, open or close the relative windows.

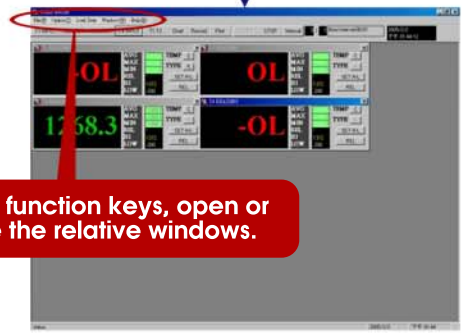

LOAD ON

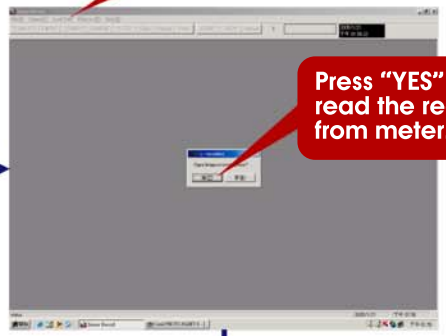

Press "YES" begins to read the record data from meter.

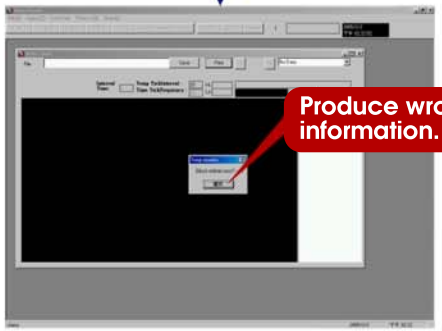

Produce wrong information.

LOAD ON

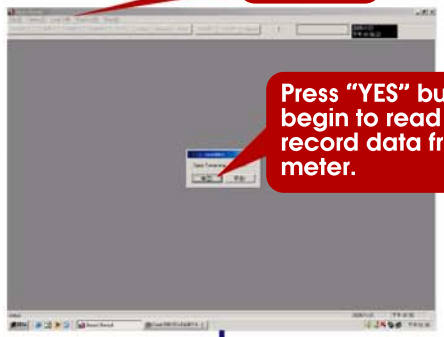

Press "YES" button to begin to read the record data from the meter.

The record data of meter is finished reading, press "YES" button to confirm.

Select record files.

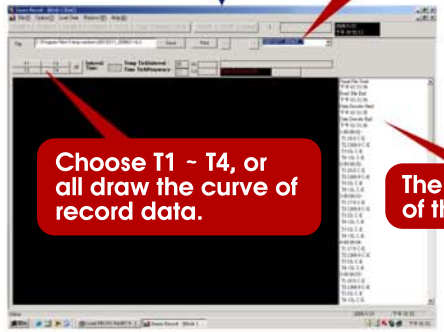

Choose T1 ~ T4, or all draw the curve of record data.

The record data of the record files.